

Minivator 2000 at a glance

Seat options	2000	
Choice of Upholstery	✓	A selection of six colours means you can choose upholstery to match your décor.
Intelligent Safety	○	Automatically returns your stairlift to the safest park position to facilitate emergency access.
Powered Swivel	○	This makes turning the stairlift seat to get in and out on the landing as easy as possible.
Retractable Seat Belt	✓	This retractable cream belt can be clipped together on one side or centrally.
Velcro Seat Belt	○	This black belt has velcro on either end to hold it firmly in place.
Perch Seat	○	Ideal for users who have difficulty bending at the hip or knee joint.

Footplate options	2000	
Manual	✓	The footplate is folded and unfolded manually.
Powered from Seat	○	Folds the footplate away when the seat is folded up.
Powered from Arm	○	The footplate can be lifted and lowered by a switch under the arm whilst the user is seated.

Track Features	2000	
Travels around corners and bends	✓	For a wide range of staircases, from ones that turn a corner to multi-flight or spiral.
Multiple charge points	✓	Use your remote control to park on charge points.
Track available in any colour	○	Customise your curved stairlift track to match your décor.
Zero intrusion into landing	○	For use when a doorway close to the top of the stairs would be obstructed by the track.
Powered Hinge	○	Automatically moves the track while the stairlift moves leaving doorways unobstructed.

Weight capacity	2000
Standard Maximum Weight	115 kg
Max weight with Heavy Duty Kit	137 kg


Standards compliance	2000
BS5776: Stairlifts	✓
ISO9386: Stairlifts	✓

Upholstery Colour Choices 2000



COCOA RUBY SAND SAPPHIRE SLATE JADE

✓ Available as standard ○ Optional



handicare

Handicare Stairlifts B.V.
Newtonstraat 35
1704 SB Heerhugowaard
The Netherlands

T +31 (0)72 576 88 88
F +31 (0)72 574 34 35
stairlifts@handicare.com
www.handicare.com

Minivator 2000

Curved stairlift



handicare

The benefits of a Minivator 2000 stairlift from Handicare

If you are thinking about installing a stairlift, and your stairs turn corners or are spiral, the Minivator 2000 offers you a safe and reliable solution.

Handicare's stairlifts have helped thousands of people overcome the problems posed by going up and down their stairs at home.

The Minivator 2000 stairlift suits most staircases with bends or corners and offers you all the basic functions that you would expect plus the option to upgrade to a powered seat swivel and/or folding footplate.



With a choice of six upholstery colours and two track colours the Minivator 2000 compliments most colour schemes. Fitted to the stairs, not the wall, it is unlikely you will need to redecorate following the installation of your Minivator 2000 stairlift.

Like all Handicare stairlifts the Minivator 2000 has a battery backup which means it will continue to work in the event of a power cut so you do not need to worry about being stranded up or downstairs.


The compact unit folds up leaving the staircase free for other users and the bespoke track is designed to fit your individual staircase and maximise clear space on the stairway. It can be supplied with a powered hinged track if required.

The Minivator 2000 also comes with two remote controls which means, once folded, you can easily send it to the upstairs charge point freeing up space in your hallway.

Example stair configurations

Curved stairlifts have tracks that are specifically designed to suit staircases that turn corners or are spiral: the staircases shown in diagram A, B and C are examples of the type of staircase that curved stairlifts can be used on, but there are many more.

All curved tracks are made to order following a survey of each individual staircase.

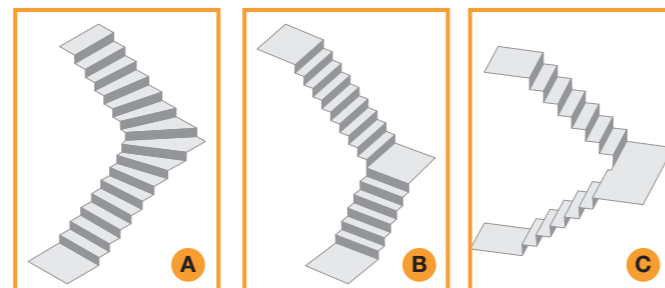

Safety as standard

Your Minivator 2000 stairlift will come with a range of safety sensors that are designed to stop your stairlift if it meets any obstruction as you travel up the stairs.

Your Minivator 2000 stairlift has an easy release retractable seat belt for added peace of mind. If you prefer you can have an easy fasten Velcro seat belt.



Easy to use

The operating toggle is easy to use, simply hold it towards the direction you wish to travel, up or down, and your stairlift will move smoothly and gently on its way.

The control is conveniently located at the end of the arm leaving both arms clear to provide unhindered support when getting on or off the seat.



Comfort features

Powered hinge

Some houses will have a doorway close to the bottom of the stairs and the track may intrude across this. In these circumstances an automatic hinged track should be fitted. This means that the track can be folded away from the doorway giving clear access. When operating the stairlift from the toggle, the hinge will lift/lower automatically.



Powered swivel

When you arrive at the top of the stairs you will need to swivel your seat round so that you exit onto the landing safely. If you choose the powered swivel option the swivel is operated by continuing to hold the toggle when you arrive at the top of the staircase. The seat will move automatically.

Powered footplate

The footplate and seat can be folded up to increase available space leaving the staircase as clear as possible for other users. If you choose the powered footplate option it will remove the need for you to bend down to fold or unfold the footplate.